




## Centaur Intermediate Strap


### INSTALLATION INSTRUCTIONS

---


1) Attach intermediate straps onto the cables, ensuring that they are placed at the midpoint between fixed cleats.

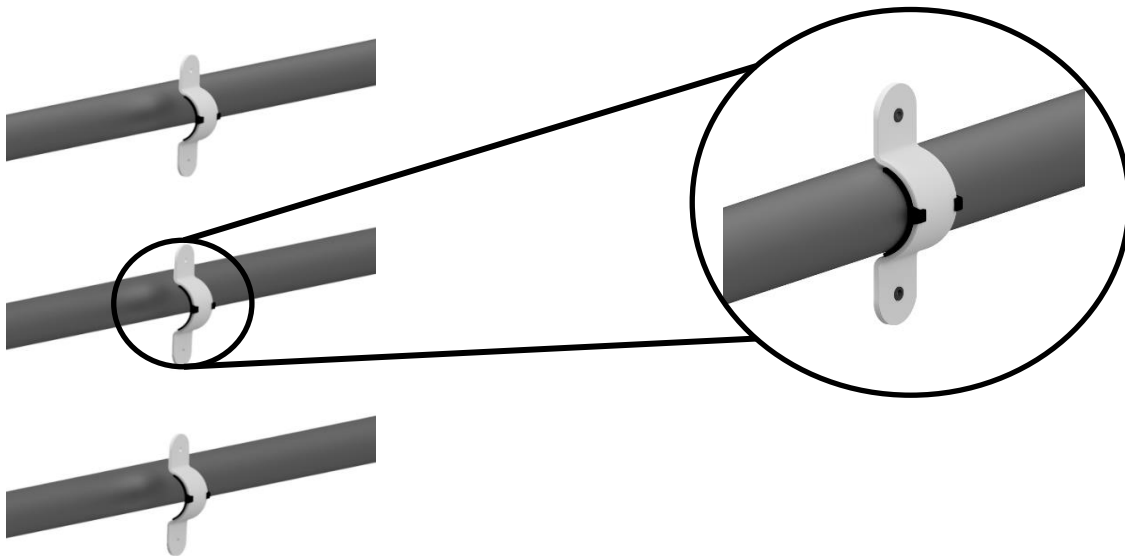

2) Thread intermediate straps through the vertical brackets, ensuring that all the straps are vertically aligned.

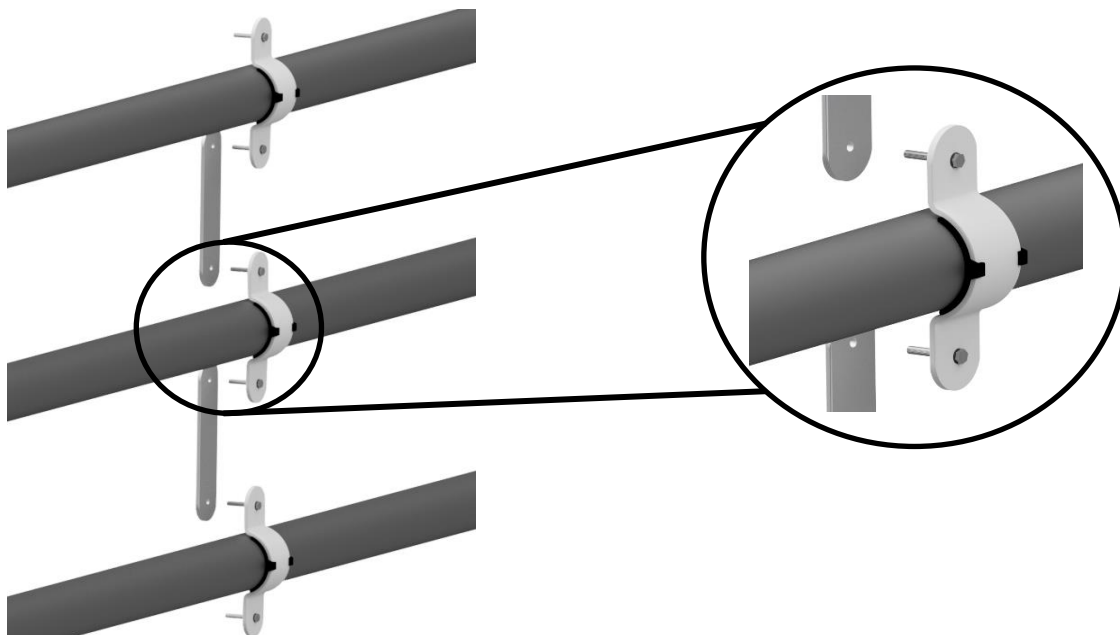


3) Attach the other half of the intermediate strap onto the cable and attach the nuts onto the set screw, finger tight.

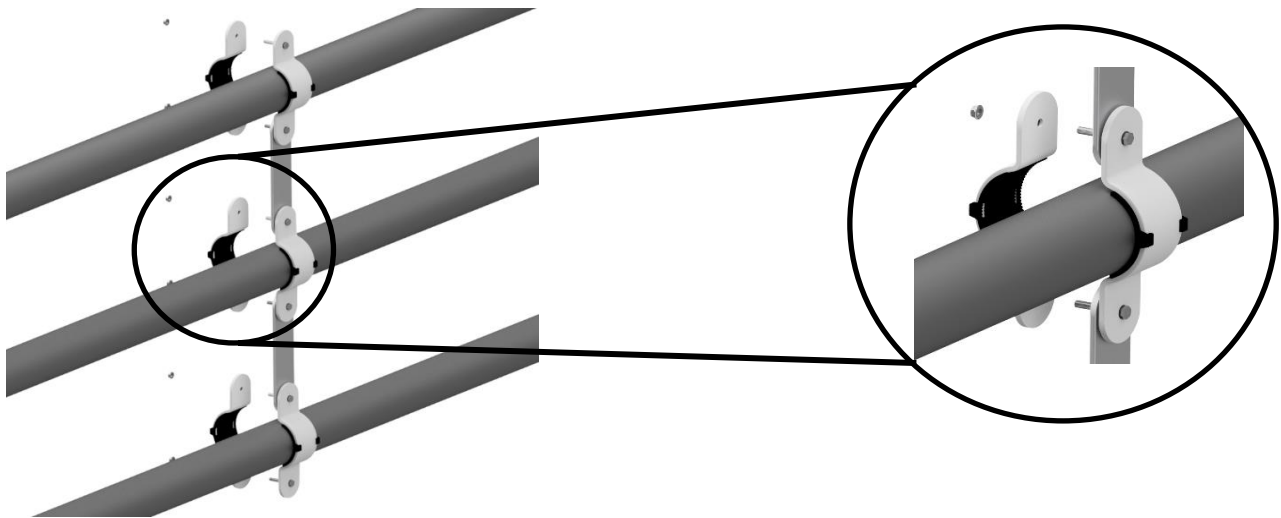

4) Using a 19mm socket/spanner for the head of the set screw and an 18mm socket/spanner for the flange nut, tighten the straps until they are secured around the cable. (20N/m of torque)

**NOTE:** Do not over tighten the strap. The clamp should secure the cable but doesn't need to be over tightened so that the cable bulges on each side of the clamp.

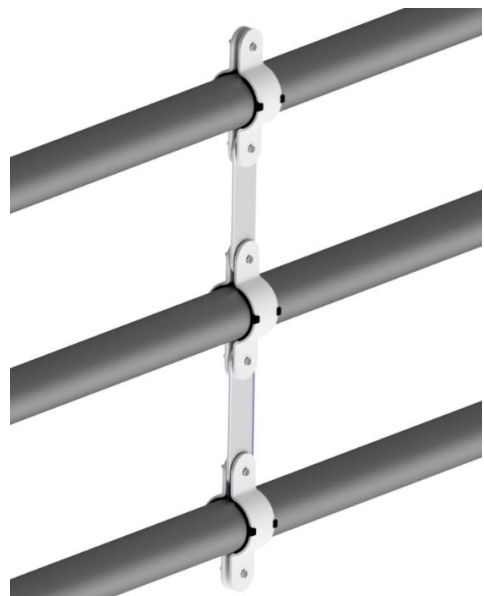

Issue 02 09/02/23