


## BUTTERFLY CLIP


### Installation Instructions

---

- 1) THREAD THE CABLE TIE THROUGH THE RECESS IN THE CLIP.  
(MAXIMUM ACCEPTED SIZE 10.2mm WIDE x 1.8mm THICK).

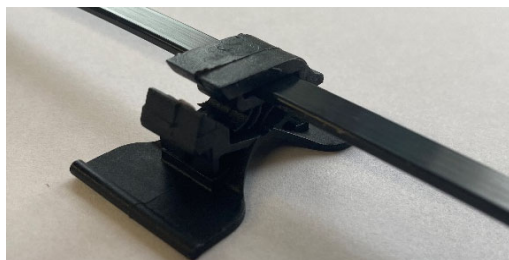

- 2) HOOK THE SOLID END OF THE CLIP INTO THE CHANNEL AND PRESS THE CLIP INTO THE CHANNEL.

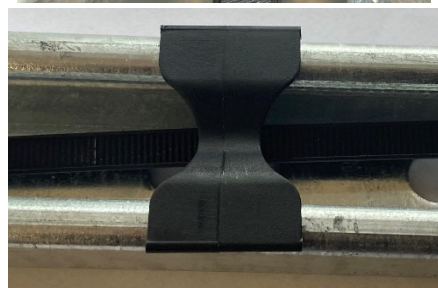

- 3) LAY THE CABLE ONTO THE CLIP AND FASTEN THE CABLE TIE AROUND IT.

